

Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81

Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16

Казахстан (7273)495-231

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13

Таджикистан (992)427-82-92-69

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Единый адрес для всех регионов: bvk@nt-rt.ru || <https://bkvalve.nt-rt.ru/>

Задвижка с жестким клином RVNH



Диаметр (мм): 40-1000

Давление (МПа): 10-25

Рабочая температура: ≤ 80 °C

Гарантия 24 месяца



Стандарт производства и формы: GB/ T12232-2005

Стандарт фланца: JB/T78 -1994, JB/T79.1-1994

Стандарт длины: GB/T12221-2005

Стандарт проверки: JB/T9092- 1999

Типоразмеры и характеристики

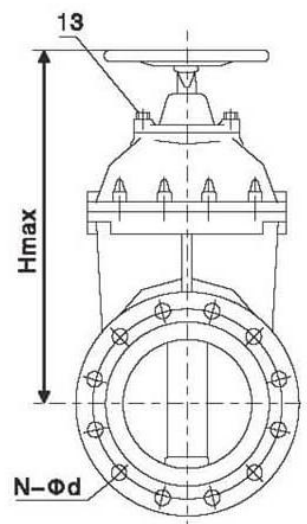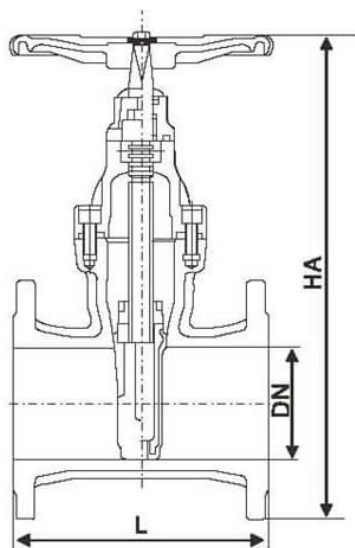

主要连接外型尺寸 Main connection size

公称通径 DN(mm) Nominal Diameter	L	Hmax	D		D1			N-Ød		
			1.0/1.6MPa	2.5MPa	1.0MPa	1.6MPa	2.5MPa	1.0MPa	1.6MPa	2.5MPa
40	1	165	/	145		110		4-18		
50	2	178	380	160		125		4-18		
65	2	190	425	180		145		4-18	8-18	
80	3	203	383	195		160		4-18	4-18	8-18
100	4	229	421	215	230	180	190	8-18		8-23
125	5	254	550	245	270	210	220	8-18		8-25
150	6	267	527	285	300	240	250	8-23		8-25
200	8	292	606	335	360	295	310	8-23	12-23	12-25
250	10	330	715	390	405	350	355	12-23	12-25	12-30
300	12	356	791	440	460	400	410	12-23	12-25	16-30
350	14	381	959	500	520	460	470	16-23	16-25	/
400	16	406	1175	565	580	515	525	16-25	16-30	/
450	18	432	1195	615	640	565	585	20-25	20-30	/
500	20	457	1216	670	715	620	650	20-25	20-34	/
600	24	508	1371	780	840	725	770	20-30	20-41	/
700	28	610	1550	895	910	840	840	24-30	24-41	/
800	32	660	1750	1015	1025	950	950	24-34	24-41	/
900	36	711	1950	1115		1050		28-34		
1000	40	811	2170	1230		1160		38-38		

注：1、RVXX表示非明杆式闸阀

RVEX表示非明杆式附电动操作装置

RVCX表示非明杆式传动帽

RRXX表示明杆式闸阀

RRHX表示明杆式附手轮

2、为提高性能，本企业保留对产品和样品的修改权利，恕不另行通知。

3、本阀门结构长度按GB/T12221-2005-3标准。

RVHS表示非明杆式附信号显示器

RVXP表示省力装置

RVCH表示非明杆式传动帽卧式操作装置

RVHX表示非明杆式附手轮

RREX表示明杆式附电动操作装置

Note: 1. RVXX stands for non-rising stem type gate valve.

RVHS stands for non-rising stem type with signal indicator.

RVEX stands for non-rising stem type with electric operating mechanism.

RVXP stands for labor-saving mechanism.

RVCX stands for non-rising stem type with drive cap.

RVCH stands for non-rising stem with drive cap horizontal operating mechanism.

RRXX rising stem type gate valve.

RVHX stands for non-rising stem type with handwheel.

RREX stands for rising stem type with electric operating mechanism.

2. For the sake of performance improvement, we reserve the right to modify our

products and samples without prior notice.

3. End to end as per GB/T 12221-2005-3.

По вопросам продажи и поддержки обращайтесь:

Архангельск (8182)63-90-72

Астрахань (8512)99-46-04

Барнаул (3852)73-04-60

Белгород (4722)40-23-64

Брянск (4832)59-03-52

Владивосток (423)249-28-31

Волгоград (844)278-03-48

Вологда (8172)26-41-59

Воронеж (473)204-51-73

Екатеринбург (343)384-55-89

Иваново (4932)77-34-06

Ижевск (3412)26-03-58

Иркутск (395)279-98-46

Казань (843)206-01-48

Калининград (4012)72-03-81

Калуга (4842)92-23-67

Кемерово (3842)65-04-62

Киров (8332)68-02-04

Краснодар (861)203-40-90

Красноярск (391)204-63-61

Курск (4712)77-13-04

Липецк (4742)52-20-81

Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13

Москва (495)268-04-70

Мурманск (8152)59-64-93

Набережные Челны (8552)20-53-41

Нижний Новгород (831)429-08-12

Новокузнецк (3843)20-46-81

Новосибирск (383)227-86-73

Омск (3812)21-46-40

Орел (4862)44-53-42

Оренбург (3532)37-68-04

Пенза (8412)22-31-16

Казахстан (7273)495-231

Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15

Рязань (4912)46-61-64

Самара (846)206-03-16

Санкт-Петербург (812)309-46-40

Саратов (845)249-38-78

Севастополь (8692)22-31-93

Симферополь (3652)67-13-56

Смоленск (4812)29-41-54

Сочи (862)225-72-31

Ставрополь (8652)20-65-13

Таджикистан (992)427-82-92-69

Сургут (3462)77-98-35

Тверь (4822)63-31-35

Томск (3822)98-41-53

Тула (4872)74-02-29

Тюмень (3452)66-21-18

Ульяновск (8422)24-23-59

Уфа (347)229-48-12

Хабаровск (4212)92-98-04

Челябинск (351)202-03-61

Череповец (8202)49-02-64

Ярославль (4852)69-52-93

Единый адрес для всех регионов: bvk@nt-rt.ru || <https://bkvalve.nt-rt.ru/>